

KEY:


- ⋯ Evacuation Route
- ➔ Exit
-  Restroom
-  Fire Extinguisher
-  Fire Alarm
-  Fire Alarm Control Panel
-  Symbol of Accessibility

IF THERE IS AN EMERGENCY:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.

DO NOT USE ELEVATORS!


- Report to the nearest designated outside assembly area.
- Do not re-enter until authorized to do so.

 Fire Alarm Control Panel is located in Switchgear Room #CD11A on Basement Level

Center on Human Development & Disability
Basement

↓
**Evacuation
Assembly Point:
South Building lawn**

COLUMBIA ROAD

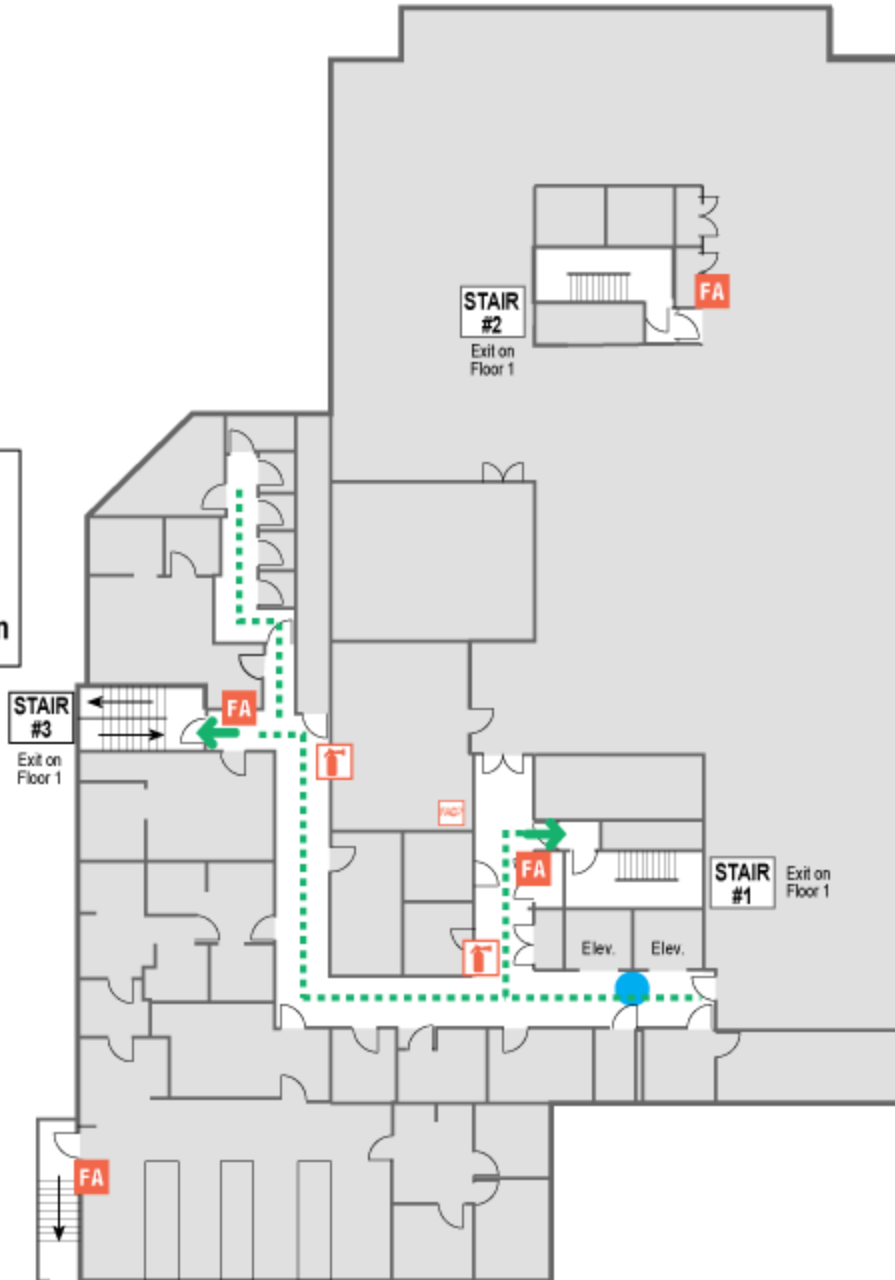

KEY:

- Evacuation Route
- Exit
- ♿ Restroom
- 🔧 Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- ♿ Symbol of Accessibility


IF THERE IS AN EMERGENCY:

- Sound fire alarm.
 - Assist persons with disabilities.
 - Exit the building using the nearest exit.
- DO NOT USE ELEVATORS!**
- Report to the nearest designated outside assembly area.
 - Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switchgear Room #CD11A on Basement Level

Center on Human Development & Disability
Floor 1

↓
**Evacuation
Assembly Point:
South Building lawn**

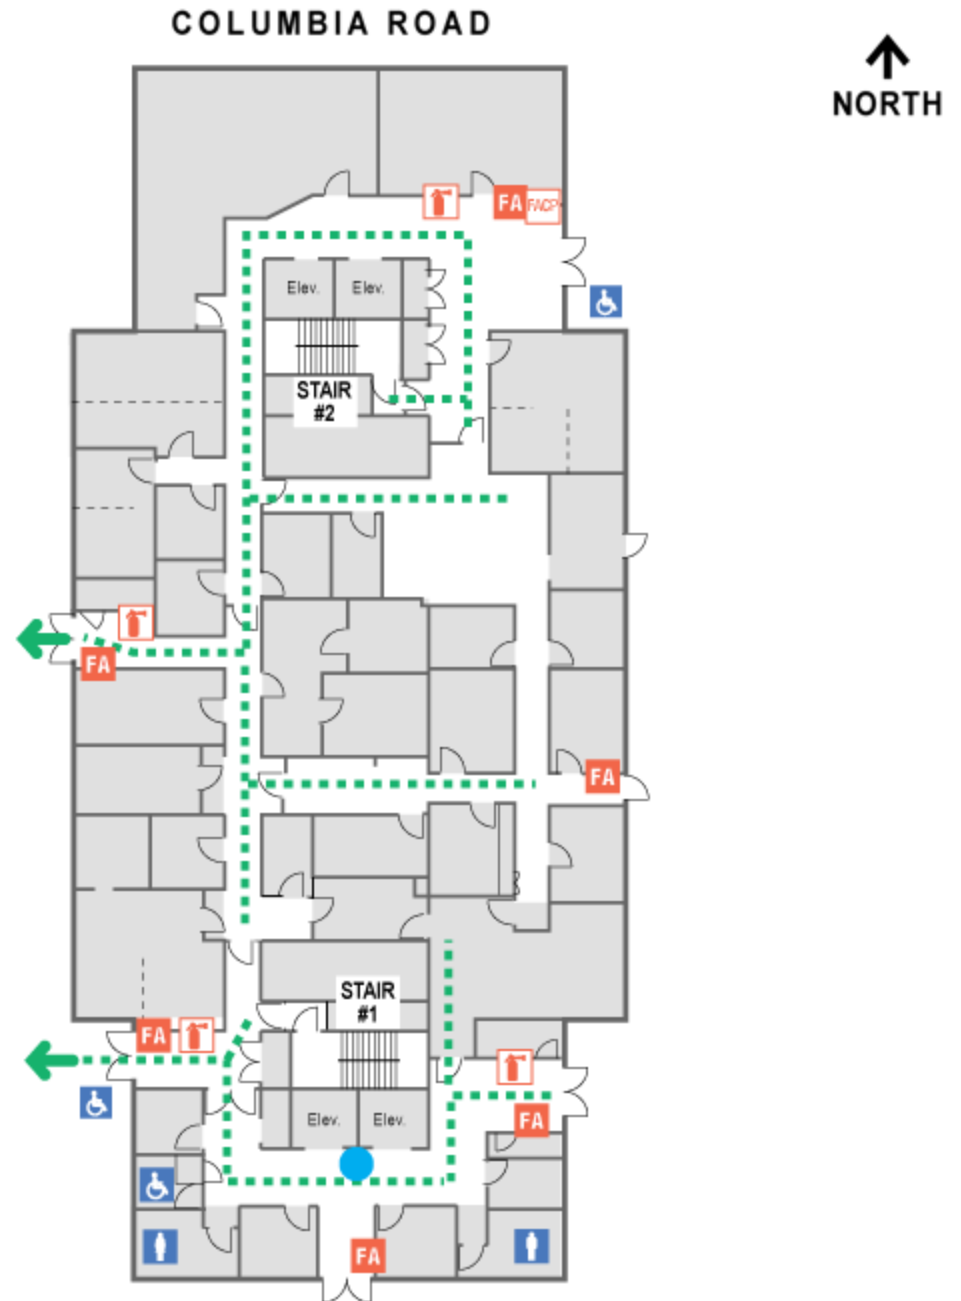

KEY:

- Evacuation Route
- Exit
- ♿ Restroom
- 🔥 Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- ♿ Symbol of Accessibility

IF THERE IS AN EMERGENCY:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.

DO NOT USE ELEVATORS!


- Report to the nearest designated outside assembly area.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switchgear Room #CD11A on Basement Level

Center on Human Development & Disability
Floor 2

↓
**Evacuation
Assembly Point:
South Building lawn**

COLUMBIA ROAD

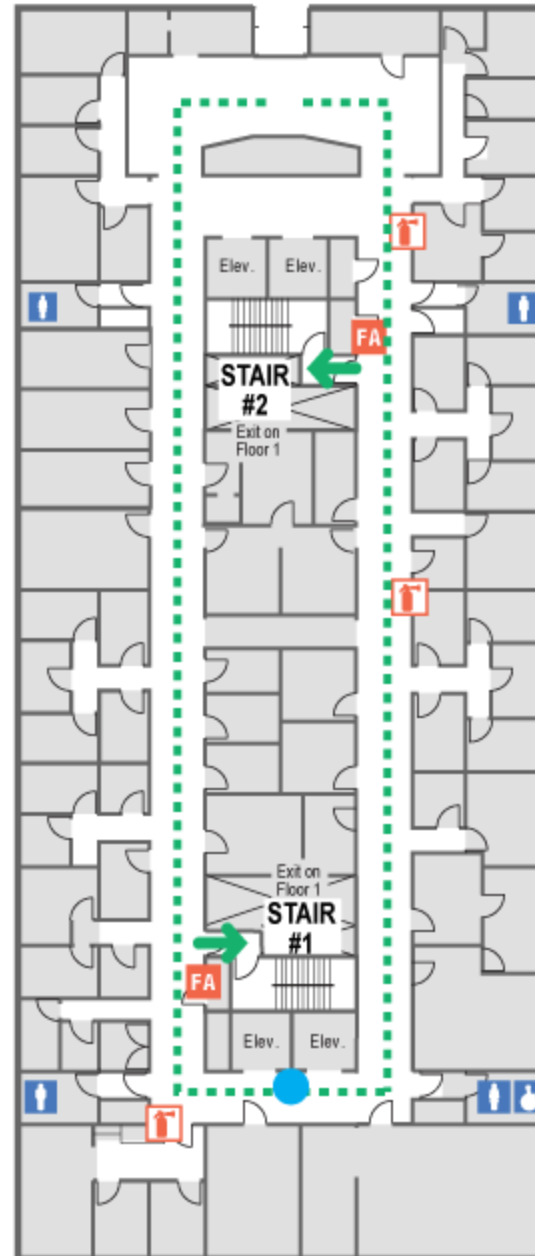

KEY:

- Evacuation Route
- ➔ Exit
- ♿ Restroom
- 🔥 Fire Extinguisher
- FA Fire Alarm
- FACP Fire Alarm Control Panel
- ♿ Symbol of Accessibility

IF THERE IS AN EMERGENCY:

- Sound fire alarm.
- Assist persons with disabilities.
- Exit the building using the nearest exit.

DO NOT USE ELEVATORS!

- Report to the nearest designated outside assembly area.
- Do not re-enter until authorized to do so.

FACP Fire Alarm Control Panel is located in Switchgear Room #CD11A on Basement Level

Center on Human Development & Disability
Floor 4

↓
**Evacuation
Assembly Point:
South Building lawn**

COLUMBIA ROAD

