

# Elite/Gold Quick Card

## **Reading an Incoming Message**

- 1 Press any button to stop the alert.
- 2 Press **▶** to display your message.  
A flashing **↓** in the right corner of the screen indicates the message is continued on an additional screen(s).
- 3 Press **▶** to read the next screen.

## **Deleting Messages**

This feature allows you to delete unlocked and un-alarmed messages.

### **To Delete a Single Message**

- 1 From the Message-Status screen, press **◀** or **▶** to select the message you want to delete.
- 2 Press **●**.
- 3 Press **▶** to move the cursor to **☒**.
- 4 Press **●** DELETE MESSAGE? is displayed.
- 5 Press **●** again to delete the message.

### **To Delete a Message While Reading It**

Follow steps 2 through 5 above while the message is displayed.

### **To Delete All Unlocked, Un-alarmed and Read Messages**

- 1 From the Function Menu, press **▶** to move the cursor to **☒**.
  - 2 Press **●** DELETE ALL MESSAGES? is displayed.
  - 3 Press **●** All unlocked, un-alarmed and read messages are deleted.
- Note: Notebook messages are not deleted with this feature.

## **Setting the Time and Date**

- 1 From the Function Menu, press **◀** to move the cursor to **⌚**.
- 2 Press **●** to display the Set-Time-and-Alarm screen.
- 3 Press **▶** to move the cursor to the hour digit.
- 4 Press **▲** or **▼** to adjust the hour.
- 5 Repeat steps 3 and 4 to adjust the minutes, AM/PM/24 hr., month, day.

## **Locking and Unlocking Messages**

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full.

When a message is locked, the **▲** symbol is replaced by the **☒** symbol indicating the message is locked.

### **To Lock or Unlock a Message**

- 1 From the Message-Status screen, press **◀** or **▶** to select the message you want to lock or unlock.
- 2 Press **●**.
- 3 Press **▶** to move the cursor to **☒** to lock the message, or **☒** to unlock the message.
- 4 Press **●**.

### **To Lock or Unlock a Message While Reading It**

Follow steps 2 through 4 above while the message is displayed.

## **Setting an Audible Alert**

- 1 From the Function Menu, press **◀** to move the cursor to **🔊**.
- 2 Press **●**.

When **🔊** is displayed on the Standby screen, your pager is in the audible alert mode.

## **Setting a Silent (Vibrate) Alert**

Note: if **🔊** is not displayed in the Standby screen, your pager is already in the silent alert mode.

- 1 From the Function Menu, press **◀** to move the cursor to **🔊**.
- 2 Press **●** to activate the silent alert. The pager vibrates to confirm your selection. The symbol is removed from the Standby screen.

## **To Enable Display Zoom:\***

- 1 From the Function Menu, press **◀** to move the cursor to **🔍**.
- 2 Press **●** Display zoom is now active.

\* Not available on the Motorola Advisor Gold™

American  
Messaging