


LSR II

After Hours Shutdown Procedure

1. When ready to shut the cytometer down, place the cytometer in **RUN** and make sure the flow rate is on **HI**.

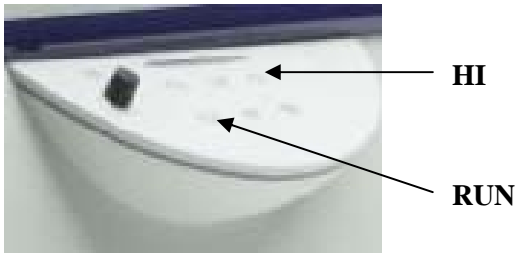

2. Run a tube of each of the following for 10 minutes:

- Bleach
- Detergent
- Ethanol
- Water

*please run in this order

3. When completed, leave a tube with no more than 1 ml of water on the SIT, turn the cytometer to **STNDBY**, and then turn the **Power** off.

