

# **Construction Industry Noise Exposures Masonry Restoration Workers**

**Department of  
Environmental  
and Occupational  
Health Sciences**

# **Contents**

<b>Introduction</b>	<b>1</b>
<b>What is noise?</b>	<b>2</b>
<b>Safe noise levels</b>	<b>2</b>
<b>What happens if you are exposed to too much noise?</b>	<b>3</b>
 <b>What we found in our research</b>	 <b>5</b>
<b>Average noise exposures and hearing protector use for masonry restoration workers</b>	<b>5</b>
<b>Task and tool exposures for masonry restoration workers</b>	<b>6</b>
<b>Noise exposures for all trades</b>	<b>8</b>
 <b>How masonry restoration workers can prevent hearing loss</b>	 <b>10</b>
<b>Recommendations</b>	<b>10</b>
<b>Summary</b>	<b>11</b>
 <b>For additional information</b>	 <b>12</b>

# Introduction

Many construction workers complain that they can't hear as well as they used to, and statistics back them up. Masonry restoration workers and other construction workers are exposed to noises loud enough to cause permanent noise-induced hearing loss. In Washington state, construction workers are five times more likely to file workers' compensation claims for hearing loss than are workers in all occupations combined.

This report from the University of Washington looks at the noise exposures of masonry restoration workers and makes recommendations applicable to their specific needs. It is based on six years of research in the construction trades. Since 1997, university researchers have collected information on noise exposures of construction workers in the Puget Sound area. We now have almost 900 full-shift measurements on workers from 11 trades, including 26 measurements on masonry restoration workers.




## What is noise?

Noise is unwanted sound. Noise levels are measured on a decibel scale (dBA), which matches the ear's sensitivity to sound. A whisper is about 30 dBA, normal conversation is 60–70 dBA, and power tools are often between 90–110 dBA. If two people at arm's length must raise their voices to be heard, the noise level is above 85 dBA. Figure 1 shows the decibel levels of some familiar sounds.

## Safe noise levels

Our noise measurements are based on the legal noise standard of the Washington Industrial Safety and Health Act (WISHA). In Washington state, the Permissible Exposure Limit (PEL) allows an 8-hour, full-shift average exposure of 85 dBA.\* For every 5 dBA increase above this level, the allowable exposure time is cut in half (see figure 2 on page 3). Workers with a full-shift average exposure above 85 dBA are required to wear hearing protection devices (either earplugs or earmuffs). They also must be included in a hearing conservation program in which they receive annual hearing tests and training on noise exposure and hearing loss. Workers must *always* use hearing protection when levels exceed 115 dBA.

**Figure 1.**  
**Decibel levels (dBA)**  
**of familiar sounds**

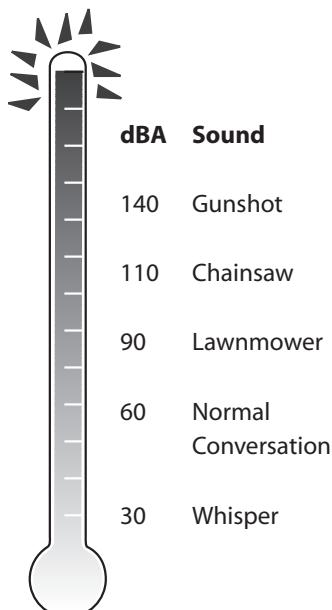


\* The federal Occupational Safety and Health Administration (OSHA) PEL for construction noise is an eight-hour average of 90 dBA.

## **What happens if you are exposed to too much noise?**

Noise exposures that are loud enough and last long enough can damage nerves in the inner ear, causing permanent and irreversible hearing loss. This damage can result from repeated exposure to levels above 85 dBA (such as years of working around construction noise without hearing protection), or from as little as one exposure above 140 dBA. Workers who have suffered hearing loss often become socially isolated because they can't communicate easily with others. They also may not be able to hear warning signals, which can lead to accidents and injuries. Our measurements show that most construction tasks and tools generate noise levels that require use of hearing protection. However, we found many situations in which workers rarely or never use hearing protection. This gap in hearing protector use puts masonry restoration workers at risk for hearing loss.

**Figure 2. WISHA allowable noise exposures**

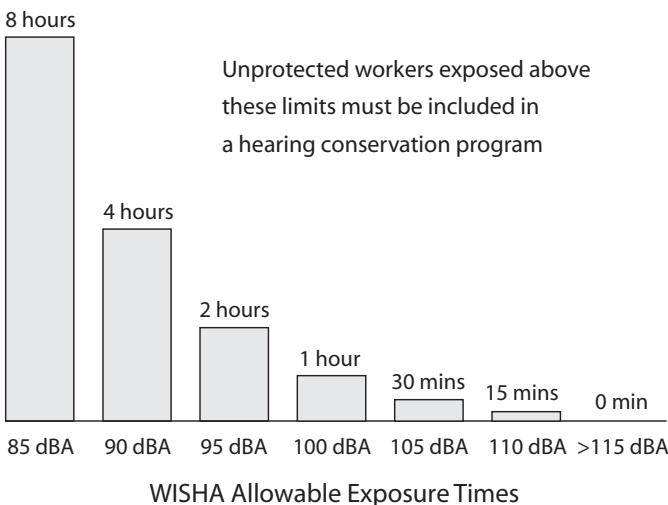



# What we found in our research

Of the 887 full-shift noise measurements we made, 26 were on masonry restoration workers. The majority were from commercial construction sites, with the remainder from industrial, residential, road, bridge, and highway work sites. The type and size of work sites are important factors in noise levels. The largest sites generally have the highest exposure levels.

## Average noise exposures and hearing protector use for masonry restoration workers

Table 1 shows information from our full-shift measurements on masonry restoration workers. The average level measured was 82.7 dBA. However, more than one-third of all measurements were above 85 dBA, the WISHA 8-hour allowable limit. Above this level, hearing protectors are required. About one in five measurements was above 90 dBA. We found that masonry restoration workers used hearing protectors a little than one-half of the time that their exposure levels were above 85 dBA. About one-third of all measurements also included exposure above 115 dBA. Hearing protectors are always required above 115 dBA, and they were almost *always* used.

**Table 1. Work shift noise level information on 26 masonry restoration workers**

Category	Result
Average full-shift noise level	82.7 dBA
Average length of measured work shifts	8 hr 23 min
% of full-shift average levels above 85 dBA	37%
% of full-shift average levels over 90 dBA	21%
% of work shifts with any noise above 115 dBA	30%
Average % time hearing protectors used above 85 dBA	56%
Average % time hearing protectors used above 115 dBA	96%

## **Task and tool exposures for masonry restoration workers**

We measured noise levels for each task reported by masonry restoration workers, along with the percent of time that they used hearing protectors when levels were above 85 dBA (see table 2). All but three tasks—pointing, cleaning, caulking; manual material handling; and breaks, lunch, and cleanup—had an average level above 85 dBA, meaning that workers should have worn hearing protection. Similarly, we measured noise levels for the tools that masonry restoration workers reported

**Table 2. Tasks, in order of increasing average noise level**

Tasks	Average noise level (dBA)	Maximum noise level (dBA)	% time hearing protection worn when needed
Pointing, Cleaning, Caulking	77.0	112.5	5%
Manual Material Handling	84.6	102.9	47%
Break, Rest, Lunch, Cleanup	84.8	104.2	24%
Brickling, Blocking, Tiling	86.5	106.0	0%
"Other" Tasks	94.6	113.3	68%
Grinding	99.0	117.2	54%

using (see table 3). Although noise levels exceeded 85 dBA for all but two tools used, masonry restoration workers didn't always report using hearing protection. In fact, workers almost *never* used hearing protection while using powder actuated tools, screw guns, and drill motors. None of the tasks or tools had an *average* noise level above 115 dBA, which would require use of hearing protectors, no matter how short the exposure.

**Table 3. Tools, in order of increasing average noise level**

Tools	Average noise level (dBA)	Maximum noise level (dBA)	% time hearing protection worn when needed
Powder Actuated Tools	82.5	103.3	0%
No Tool	83.8	107.4	6%
Hammer, Mallet, Sledge	87.4	105.5	7%
Screw Gun, Drill Motor	95.1	115.5	0%
"Other" Tools	96.2	111.0	83%
Hand Power Saw	96.2	108.5	74%
Rotohammer	97.7	113.9	70%
Other Hand Power Tool	99.1	110.6	32%

## Noise exposures for all trades

The average full-shift noise exposure level for *all workers in all trades* was 81.4 dBA. The percentage of full-shift measurements by trade that exceeded the WISHA 8-hour allowable limit of 85 dBA is shown in Table 4. The trades with the most exposures above the WISHA limit were operating engineer and cement mason (46% of full-shift measurements were above 85 dBA), while sheet metal workers had the fewest exposures above the WISHA limit (11% above 85 dBA).

The trade with the highest average work shift exposure was operating engineer (84.6 dBA); insulation workers had the lowest average work shift exposure (75.3 dBA). About one-third of full-shift measurements

**Table 4. Percent of work shifts above WISHA 8-hour standard (in order of increasing percentages), percent of time hearing protection was used above 85 dBA, and average full shift noise level (by trade)**

Trade	% of 8-hour work shifts > 85 dBA	% of time > 85 dBA hearing protection used	Average full-shift noise level (dBA)
Sheet Metal Worker	11%	66%	79.0
Insulation Worker	18%	14%	75.3
Tilesetter	20%	12%	76.0
Electrician	20%	18%	79.9
Bricklayer	26%	49%	82.6
► Masonry Restoration	<b>37%</b>	<b>56%</b>	<b>82.7</b>
Carpenter	40%	43%	82.2
Ironworker	40%	13%	82.9
Laborer	44%	NA	83.6
Cement Mason	46%	8%	79.3
Operating Engineer	46%	70%	84.6
<b>All Trades</b>	<b>34%</b>	<b>39%</b>	<b>81.4</b>

for all trades were above the WISHA limit for workers not using hearing protectors. Even “quiet” trades such as electricians and insulation workers sometimes had full-shift measurements that were above the WISHA limit. Overall, workers in all trades reported using hearing protection less than 40% of the time they were exposed above 85 dBA, and about one-third of the time they were exposed at the much higher level of 115 dBA. Operating engineers had the highest use of hearing protection and cement masons had the lowest, despite the fact that cement masons had the most exposures above the allowable limit. For laborers, “NA” means hearing protection use was not evaluated.



# How masonry restoration workers can prevent hearing loss

Construction workers in *all* of the trades we examined have the potential for high exposure to noise. Although construction workers make up only 7% of the Washington state workforce, they file more than 21% of all accepted workers' compensation hearing-loss claims. The preferred way to prevent hearing damage is to reduce noise at its source. However, earplugs and earmuffs will always be necessary for some construction activities.

More than one-third of all full-shift average measurements on masonry restoration workers were above the WISHA standard for an 8-hour noise exposure. Unfortunately, masonry restoration workers used hearing protection only a little more than half of the time they were exposed above 85 dBA. They did almost *always* use them when they were exposed above 115 dBA. Masonry restoration workers often got more noise exposure from activities going on around them than they did from their own work, and need to consider nearby activities as well as their own when choosing hearing protection.

## Recommendations

Educational programs can help make masonry restoration workers aware that many activities on the job site have potentially hazardous noise levels. All masonry restoration workers in the construction industry should be enrolled in a hearing conservation program, and efforts should be made to reduce the noise levels of construction activities and to increase the use of hearing protection.

All hearing protectors are labeled with a Noise Reduction Rating (NRR), which is a laboratory estimate of how much noise the hearing protector will block. Typically, the NRR level is about two times higher than the protection most workers experience in actual use.

Almost all full-shift noise exposure measurements on masonry restoration workers were below 98 dBA. To adequately protect against these average noise levels, we recommend hearing protectors with an NRR of 26 dB. For most activities, an NRR higher than this will provide

too much protection, interfering with normal communication and work. Workers who find that hearing protectors with a very high NRR (33 dB is the highest available) make it difficult to hear regular work sounds should try a different hearing protector with a lower NRR. On the other hand, workers exposed to very high levels of noise should use a hearing protector with a higher NRR. Workers exposed to intermittent noises should consider using earmuffs or banded earplugs, which can be removed and inserted quickly. A single type of hearing protector *will not* work for all workers and all exposure levels, so it is important to have several types and styles of hearing protectors available.

## **Summary**

Half of the measured construction tasks exposed masonry restoration workers to noises above 85 dBA, loud enough to warrant use of hearing protection. One task, grinding, involved occasional exposures above 115 dBA, a level at which hearing protection is *always* required. We found that actual use of hearing protection ranged from never to 68% of the time, depending on the task.

Likewise, all but two of the construction tools we measured exposed workers to noise levels above 85 dBA. The masonry restoration workers we studied almost always used hearing protection with rotohammers, hand power saws, and "other" tools, but used it far less with the remaining tools.

Workers exposed to loud noises without use of hearing protection risk losing their hearing. Properly worn hearing protection can prevent this loss. Training on the proper use of hearing protection is an important part of a hearing conservation program, and should take into account the need for construction workers to hear warning shouts and signals. In addition to providing hearing protectors and training, construction companies should look into reducing noise exposure levels by purchasing quieter equipment or shielding workers from the noisiest equipment.

# **For additional information**

## **About the UW study and its results**

University of Washington *Occupational Noise* Web site:

<http://depts.washington.edu/occnoise>

or contact the Field Research and Consultation Group at 206-543-9711

or [cnsunsafe@u.washington.edu](mailto:cnsunsafe@u.washington.edu)

## **For more information about noise and its effects on hearing**

NIOSH web page: <http://www.cdc.gov/niosh/topics/noise/>

or WISHA hearing conservation web site:

<http://www.lni.wa.gov/Safety/Topics/AtoZ/NoiseHearing/default.asp>

## **For assistance in developing a hearing conservation program**

Contact the WISHA consulting service for the nearest consultant

<http://www.lni.wa.gov/Safety/KeepSafe/Assistance/Consultation/default.asp>

or call 800-547-8367

Or contact Build It Smart, a local labor/management organization for

the construction industry, at [www.builditsmart.org](http://www.builditsmart.org)

or 360-596-9200

This research was conducted with funds from the National Institute for Occupational Safety and Health and would not have been possible without the generosity and assistance of the apprenticeship training programs, contractors, and construction workers who participated in the study.

This brochure was printed by the University of Washington Department of Environmental and Occupational Health Sciences with funds provided by the Washington state Medical Aid and Accident Funds. The research described in this brochure was conducted by Noah Seixas, PhD and Rick Neitzel, MS. The brochure was developed by Rick Neitzel, Noah Seixas, Cathy Schwartz, and Kathy Hall and printed by members of SEIU Local 925. This brochure may be reproduced providing credit is given to the Department of Environmental and Occupational Health Sciences, University of Washington. The contents may not be altered without the authors' permission.

Photos: Rick Neitzel, Sebrina Somers



University of Washington  
**School of Public Health**  
*and* Community Medicine

---

Noise and Hearing Loss in Construction Study

Department of Environmental and Occupational Health Sciences

Health Sciences Building

Box 357234

Seattle, WA 98195-7234